

ATN NV-360



u s e r ' s g u i d e

Important Export Restrictions! Commodities, products, technologies and services contained in this manual are subject to one or more of the export control laws and regulations of the U.S. Government and they fall under the control jurisdiction of either the US Department of State or the US BIS-Department of Commerce. It is unlawful and strictly prohibited to export, or attempt to export or otherwise transfer or sell any hardware or technical data or furnish any service to any foreign person, whether abroad or in the United States, for which a license or written approval of the U.S. Government is required, without first obtaining the required license or written approval from the Department of the U.S. Government having jurisdiction. Diversion contrary to U.S. law is prohibited.





Camera adapter (optional)



Doubler (optional)

CAUTION:

THIS PRODUCT CONTAINS NATURAL RUBBER LATEX WHICH MAY CAUSE ALLERGIC REACTIONS.

The information in this manual furnished for information use only, is subject to change without notice, is not to be construed as a commitment by ATN Corp.

ATN Corp. assumes no responsibility or liability for any errors or inaccuracies that may appear in this book.

©2010 ATN Corp. All right reserved.

FEATURES

- Automatic brightness control
- Built-in IR illuminator
- Total darkness technology
- Camera/Camcorder adaptable
- Manual focus
- Rugged and versatile design
- Adjustable eyepiece
- High res. 1st Gen.+ intensifier tube
- Water and dust resistant
- Superb 3X lens system
- Daylight filters

SPECIFICATIONS

Magnification	3X
Intensifier Tube	1 st Gen.; high res.
Lens System	90 mm; F1:1.7
Field of View	15°
Resolution.....	40 lp/mm
Range of Focus.....	1.5m to ∞
Power Supply.....	3V Lithium CR123A Battery
Battery Life	12 hours
Dimensions.....	200 x 60 x 60 mm (8" x 2.5" x 2.5")
Weight.....	0.6kg (1.3 lbs)
Diopter Adjustment	±5
Operating Temperature	-40°C to +50°C
Storage Temperature	-50°C to +70°C

* ATN reserves the right to change the above specifications at any time without notice

APPLICATION

The ATN NV-360 Night Vision Monocular is designed for observation and identification of objects at low light levels (less than 1.0 lux) in the temperature range from -40°C to +50°C.

The ATN NV-360 Night Vision Monocular is a complex optico-electronic system for individual use. The device consists of the objective lens assembly, ocular lens assembly, IR illuminator, and the body. The body contains the image intensifier tube assembly with the integrated high voltage power source and the battery housing. The battery housing cover is near to the lens for the IR illuminator. Objective lens protective cover (not shown) is designed to protect the NV-360 from high-level illumination. The pinhole at the center of the protective cover allows an user to check the operation ability of the device in daylight conditions.

MASTER POWER SWITCH

The device is switched on by turning the main switch located on the rear side of the scope. The NV-360 is controlled by a built-in computer that regulates the functions of the scope. The green ON/OFF LED indicator lights up when device is on.

INFRA-RED (IR) ILLUMINATOR

Infra-red (IR) Illuminators are common for night vision technology. The IR light enhances greatly the performance of your scope, while remaining almost invisible to a naked eye. In dark environment, power up the scope. Now, find a scene and examine it without the IR on

then with IR powered up. Note the difference in illumination. It is important to remember that the IR illuminator is simply an infra-red light source, and like any light source it may lose its effectiveness over a great distance.

The NV-360 IR illuminator is the ATN100M and is located near the battery compartment. You may need a different field of IR beam coverage. If so the beam is focusable. By turning the lens of the IR you can change the beam width slightly. The red IR activity LED indicator lights up when IR illuminator is on.

NOTE: *The IR automatically turn off when the unit's main power switch is turned off.*

FOCUSING

- Observe the scene and adjust the diopter for optimal image clarity. Focus the front lens until the image and the grain become both sharp.
- You may now enter a dark environment or simply shut the lights off in order to darken the room.
- Next, remove the lens cap/daylight filter. Adjust the front lens for distance of the focus. You should not have to readjust the diopter.

NOTE: *We suggest that you focus the diopter during daylight with the protective lens cover on.*

- You may now enter a dark environment or simply shut the lights off in order to darken the room.
- Next, remove the lens cap/daylight filter. Adjust front lens for distance of the focus. You should not have to readjust the diopter.

NOTE: *The front lens should be readjusted as you view objects at different distances.*

PREPARATION FOR OPERATION

Before getting started make sure to follow these steps:

- Take the monocular out of the case.
- Install the battery into the housing with the polarity order shown at imprint on the body. Battery type: 3 Volt Lithium CR123A.
- Switch on the monocular **with the protective lens cover still attached to the lens.**
- Make sure that the green luminance of the light intensifier tube is present.
- If the device is not to be used for extended period of time (more than 10 days) remove the battery.
- Avoid touching lenses. If fingerprints or traces of dirt or dust appear, clean surface with a soft dust cloth and glass cleaner.
- **Keep lens cap/protective lens cover on when not in use.**
- Avoid contact with dust, steam, and gas.
- The NV-360 is not harmful to the user or the environment.
- Do not disassemble except to clean the front lens and the eyepiece: **it will void your warranty.**
- Evaluate the scopes function by looking through it in a lit environment with the daylight filter lens cap on. **Never use in daylight without the daylight filter lens cap on.**

CAMERA ADAPTER

To use your NV-360 scope with a 35-mm camera or camcorder you will need the following:

- 1) If you plan to use a camcorder, then your camcorder must have a MACRO feature. Most modern camcorders today have a MACRO feature built-in.

- 2) If you plan to use a 35-mm camera you will need a MACRO lens. If you don't have one we advise that you contact your local camera store.
- 3) You may or may not need a STEP-UP or STEP-DOWN ring in order to adapt the camera adapter to your lens.

NOTE: The camera adapter comes with 37-mm and 52-mm threads. If you need other sizes your local camera store should be able to help.


- Remove the rubber eyecup from the NV-360.
- Screw the camera adapter onto the front of the lens on your Video camera lens or your 35-mm camera lens.
- Loosen the three set screws on the camera adapter.
- Place the camera adapter over the NV-360 eyepiece.
- Tighten the three set screws to fit snugly to the NV-360 eyepiece.
- You may need to focus the 35-mm camera or video camera in combination with the NV-360 in order to get the sharpest possible image.
- We suggest that you find an open space to work in. Focus the NV-360 so that the scene is at its sharpest. For the best results you should disable the auto focus (if any) on either the 35-mm camera or the video camera and manually focus the 35-mm camera or the video camera. Once the image is sharp simply adjust the NV-360 front lens to change the focus.
- An important thing to remember is that you are not taking a picture of an object that is far away from you, but you are actually taking a picture of the phosphorous screen of the NV-360 that is only 2-3 inches away.



DOUBLER

Unscrew 90 mm lens off the body of the NV-360 (make sure that the unit is turned off). Screw the doubler into the body of the NV-360 instead of the 90 mm lens. Screw the 90 mm lens into the doubler.

NOTE: When attaching the doubler do not be afraid to use a little force.

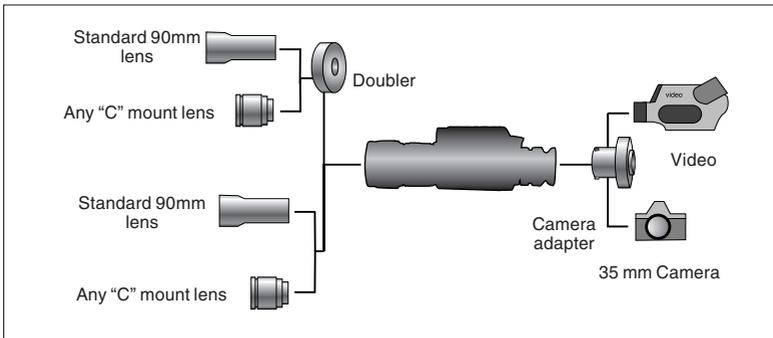

CLEANING THE EYEPIECE

You may need to clean the eyepiece of the NV-360 from time to time in order to guarantee top performance. When you receive your NV-360 you should check for dust on the eyepiece of the unit.

First you will need to remove the eyepiece. To do that you will initially need to loosen the 2 set screws that can be found on the base. Then unscrew the eyepiece counter-clockwise to remove it.

NOTE: *You do not have to remove the set screws completely, they are very small and it is very easy to misplace them.*

CAUTION: *Use only Photographic lens cleaning tissue for lens surfaces. Be careful not to scratch or smudge any of these surfaces. When using compressed air to blow dust away, make sure to avoid inverting the can while spraying. This can cause frozen propellant to exit the can, which can cause serious problems with the glass and phosphor screen.*

WARNINGS AND CAUTIONS

- Always remember to turn off the Night Storm when it is not in use. If you do not plan on using your scope for a period of more than 10 days, you should remove the batteries.
- **Keep lens cap/daylight filter on when not in use.**
- Avoid contact with dust, steam, and gas.
- The Night Storm is not harmful to the user or the environment.
- Do not disassemble except to clean the front lens and the eyepiece: **it will void your warranty.**
- Evaluate the scopes function by looking through it in a lit environment with the protective lens cover on. Never use in daylight without the daylight filter lens cap on. Do not surpass ten minutes of testing.
- **Never point the Night Storm at a bright light source.** If the scope shuts off automatically after directing it at a bright light source, turn the unit off and wait 1 - 2 minutes before turning the unit back on.
- Adverse atmospheric conditions such as fog, smog, or haze and a lack of ambient light (moon or starlight) may diminish the effective viewing distance. All technical data for this unit was compiled in a controlled environment.
- If you use the rubber eyecaps for a long period of time, you may suffer skin inflammation. If you develop any symptoms, consult a doctor immediately.

TROUBLESHOOTING

Q: Flashes, flickers, or clicking occur while operating.

S: If it occurs within the first five minutes of inserting new batteries, it is normal and the device will resume normal operation soon thereafter. If it occurs for more than 10 minutes, contact your dealer or other authorized representative for instructions.

Q: Dark spots on screen.

S: These are cosmetic blemishes in the intensifier tube or dust particles accumulated on the screen. Just like a TV, night vision intensifier tubes attract dust particles. These are easily cleaned using photo-type cleaning equipment.

Q: Image not clear.

S: Adjust front lens at night. If problem persists, turn on IR.

Q: Fixed-pattern noise in a honeycomb shape.

S: Usually a cosmetic blemish characterized by a faint honeycomb-type pattern. It usually occurs when viewing very bright lights. Adjust the brightness of the unit to reduce noise.

Q: LED's keep turning off after a few moments.

S: This is the normal mode of operation. It will increase your scope batteries life and make you harder to detect

2 YEAR PRODUCT WARRANTY

This product is guaranteed to be free from manufacturing defects in material and workmanship under normal use for a period of 2 (two) years from the date of purchase. In the event a defect that is covered by the foregoing warranty occurs during the applicable period stated above, ATN, at its option, will either repair or replace the product, and such action on the part of ATN shall be the full extent of ATN's liability, and the Customer's sole and exclusive remedy. This warranty does not cover a product (a) used in other than its normal and customary manner; (b) subjected to misuse; (c) subjected to alterations, modifications or repairs by the Customer or by any party other than ATN without prior written consent of ATN; (d) special order or "close-out" merchandise or merchandise sold "as-is" by either ATN or the ATN dealer; or (e) merchandise that has been discontinued by the manufacturer and either parts or replacement units are not available due to reasons beyond the control of ATN. ATN shall not be responsible for any defects or damage that in ATN's opinion is a result from the mishandling, abuse, misuse, improper storage or improper operation, including use in conjunction with equipment which is electrically or mechanically incompatible with or of inferior quality to the product, as well as failure to maintain the environmental conditions specified by the manufacturer. **CUSTOMER IS HEREBY NOTIFIED THAT OPERATION OF THE EQUIPMENT DURING DAYLIGHT HOURS OR UNDER ANY EXCESSIVE LIGHT CONDITIONS MAY PERMANENTLY DAMAGE THE INTERNAL COMPONENTS OF THE UNIT AND SAID DAMAGE WILL NOT BE COVERED UNDER THIS WARRANTY.** This warranty is extended only to the original purchaser. Any breach of this warranty shall be waived unless the customer notifies ATN at the address noted below within the applicable warranty period.

The customer understands and agrees that except for the foregoing warranty, no other warranties written or oral, statutory, expressed or implied, including any implied warranty of merchantability or fitness for a particular purpose, shall apply to the product. All such implied warranties are hereby and expressly disclaimed.

LIMITATION OF LIABILITY

ATN will not be liable for any claims, actions, suits, proceedings, costs, expenses, damages or liabilities arising out of the use of this product. Operation and use of the product are the sole responsibility of the Customer. ATN's sole undertaking is limited to providing the products and services outlined herein in accordance with the terms and conditions of this Agreement. The provision of products sold and services performed by ATN to the Customer shall not be interpreted, construed, or regarded, either expressly or implied, as being for the benefit of or creating any obligation toward any third party of legal entity outside ATN and the Customer; ATN's obligations under this Agreement extend solely to the Customer. **ATN's liability hereunder for damages, regardless of the form or action, shall not exceed the fees or other charges paid to ATN by the customer or customer's dealer. ATN shall not, in any event, be liable for special, indirect, incidental, or consequential damages, including, but not limited to, lost income, lost revenue, or lost profit, whether such damages were foreseeable or not at the time of purchase, and whether or not such damages arise out of a breach of warranty, a breach of agreement, negligence, strict liability or any other theory of liability.**

PRODUCT WARRANTY REGISTRATION

In order to validate the warranty on your product, ATN must receive a completed Product Warranty Registration Card for each unit or complete warranty registration on our website at www.atncorp.com. Please complete the included form and immediately mail it to our Service Center: ATN Corporation, 1341 San Mateo Avenue, South San Francisco, CA 94080.

OBTAINING WARRANTY SERVICE

To obtain warranty service on your unit, End-user must notify ATN service department by calling **800-910-2862** or **650-989-5100** or via e-mail service@atncorp.com to receive a Return Merchandise Authorization number (RMA). When returning please take or send the product, postage paid, with a copy of your sales receipt to our service center, ATN Corporation at the address noted above. All merchandise must be fully insured with the correct postage; ATN will not be responsible for improper postage or, missing or damaged merchandise during shipment. When sending product back, please clearly mark the RMA# on the outside of the shipping box. Please include a letter that indicates your RMA#, Name, Return Address, reason for service return, Contact information such as valid telephone numbers and/or e-mail address and proof of purchases that will help us to establish the valid start date of the warranty. **Product merchandise returns that do not have an RMA listed may be refused or a significant delay in processing may occur.** Estimated Warranty service time is 10-20 business days. End-user/customer is responsible for postage to ATN for warranty service. ATN will cover return postage/shipping after warranty repair to end-user/customer only if product is covered by aforementioned warranty. ATN will return product after warranty service by domestic UPS ground and/or domestic mail. Any other requested, required or international shipping method the postage/shipping fee will be the responsibility of the end-user/customer.

12082011



For customer service and technical support, please contact
American Technologies Network Corp.

1341 San Mateo Avenue, South San Francisco, CA 94080

Toll Free Phone: 800-910-2862

Phone: 650-989-5100; fax: 650-875-0129

www.atncorp.com